 


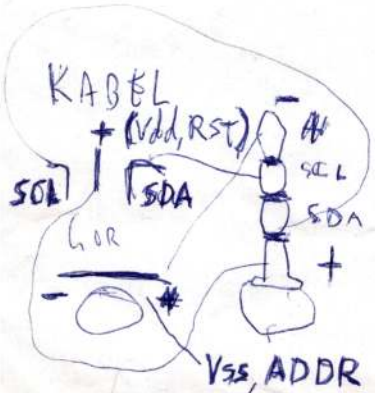


\* dofoldu ~  
Bostuit  
brankino  
podstavejse

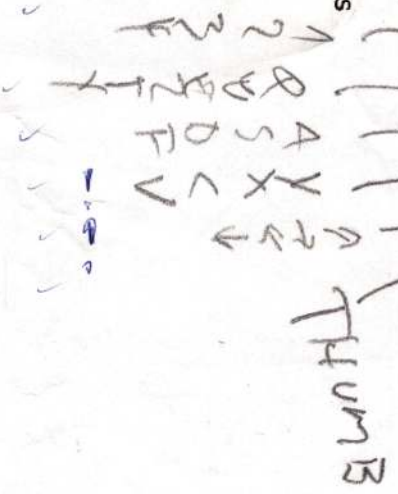

- Please also see documentation (especially the notes) in the \*.md files  
- Row and column assignments are to matrix positions, not physical positions

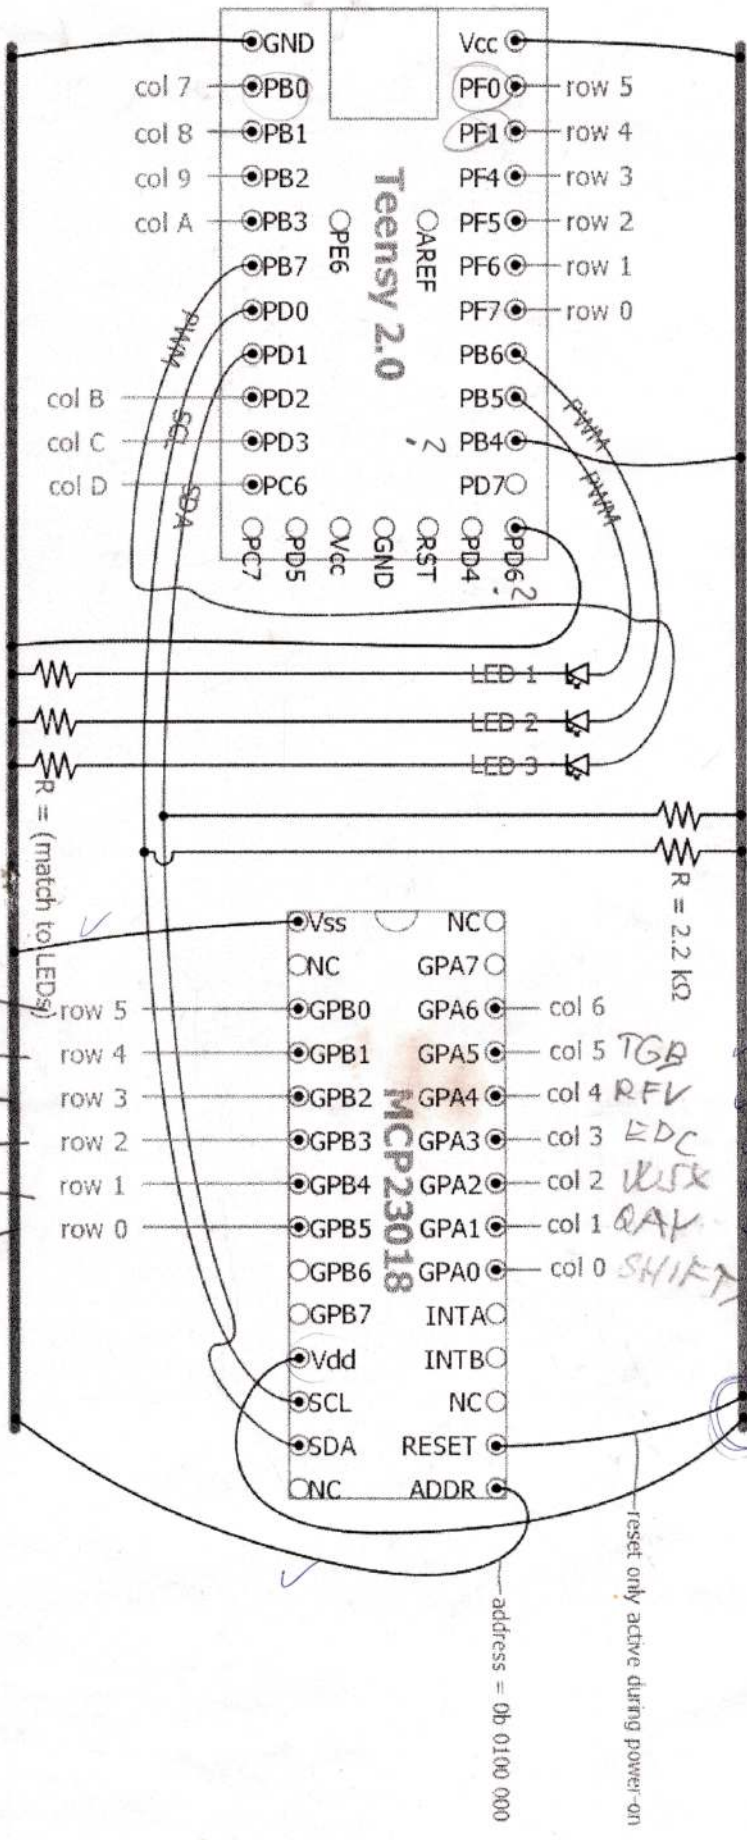

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8

reset only active during power-on

address = 0b 0100 0000